



MUSIC MAKER

List of

ACCESSORIES

and

SERVICES

MUSIC MAKER



**ACCESSORIES
SERVICES
& SPARE PARTS**

THE DITCHBURN ORGANISATION • LYTHAM • LANCASHIRE

TELEPHONE • LYTHAM 7421

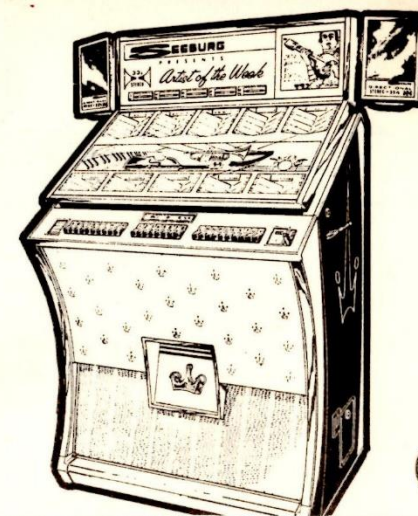 
LONDON OFFICE
PROGRESS HOUSE • 300 KINGSTON ROAD
MERTON PARK • LONDON S.W.20

INDEX

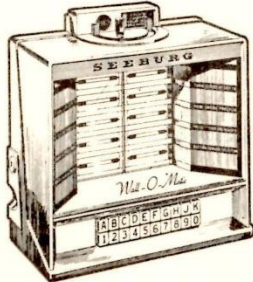 
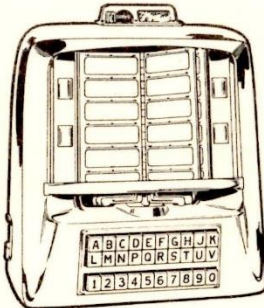 
	Page
Accessories for MUSIC MAKER SEEBURG	1
Extension Loud Speaker Units.....	4
General Accessories	6
Packs of Essential Supplies	7
Price List.....	8
Spares for Music Maker 16/45.....	9
" " " " H. 16/45	10
" " " " 30	12
" " " " T.100	14
" " " " T.200	16
" " " " P.200.....	18
" " " " PT.200	20
" " " " SEEBURG.....	22

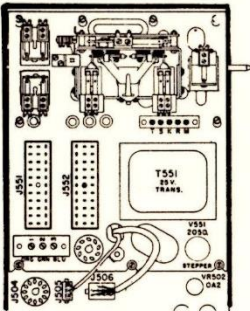 
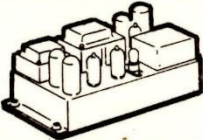 
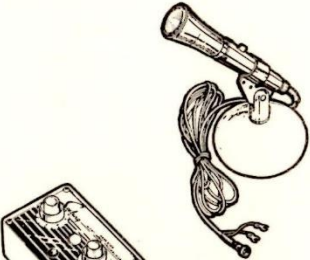 
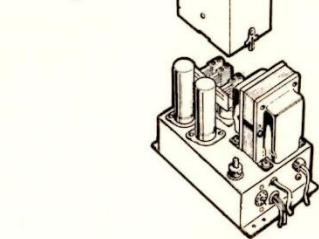 
**N.B. Please order accessories and spare parts
by quoting catalogue number and description.**

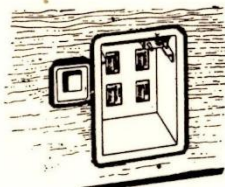
MUSIC MAKER SEEBURG ACCESSORIES

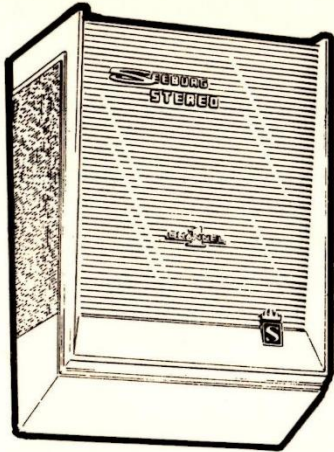


1

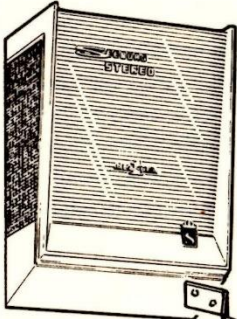
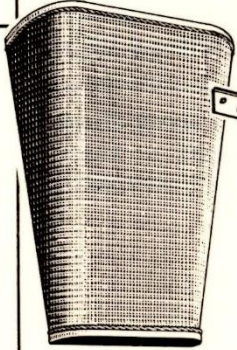
Cat. No.	Description and Part Number		Function
S.100	100 Selection WALL-O-MATIC Type 3W-100		The theatre-like showcase of this Remote Control Selection Unit displays the titles brilliantly, bringing the Phonograph 'nearer to the customer' thus attracting more play. Up to six units can be offered with each Phonograph without an additional power unit. <i>Specifications</i> Single pricing 3d., 6d. or 1/-. Measurements $12\frac{1}{2}'' \times 12\frac{1}{2}'' \times 6\frac{1}{4}''$. Weight 21 lbs. For use with Phonograph Model H100 Note:—Stepper unit (Cat. No. S.103) not required.
S.101	160 Selection WALL-O-MATIC Type S-3W160		Streamlined, strikingly attractive and remarkably compact these two Remote Control Selector Units fulfilling the same extra profit-making function as the Wall-o-Matic 100. Essential for use with the Hideaway model phonographs, these wall units can also be used to distinct advantage with the floor models listed. Up to six units can be offered with each Phonograph without an additional power unit. Note:—Stepper unit (Cat. No. S.103) required with all except Hideaway models. Single pricing unit 3d., 6d. or 1/-. Measurements $14\frac{7}{16}'' \times 12\frac{1}{4}'' \times 7\frac{1}{4}''$. Weight $31\frac{1}{2}$ lbs. For use with Phonograph Models Q160, AY160, AY160U, EHY160 and single pricing model 222D.
S.102	160 Selection WALL-O-MATIC Type D-3W160		Dual pricing unit 3d., 6d. or 1/-. Measurements $14\frac{7}{16}'' \times 12\frac{1}{4}'' \times 7\frac{1}{4}''$. Weight $29\frac{1}{2}$ lbs. For use with Dual pricing model 222D.

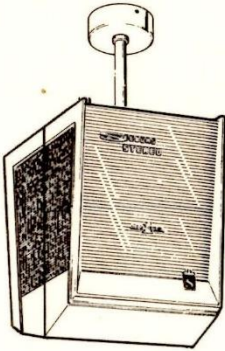
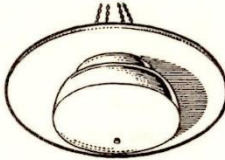
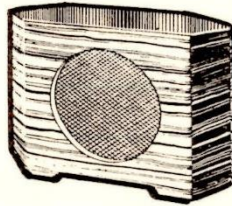
Cat. No.	Description and Part Number		Function
S.103	Remote control STEPPER UNIT Type RCSU2 Part No. 508500		An essential extra to bring Wall-o-Matics into use with Phonograph Models—Q160—AY160—AY160U—EHY160 and single pricing 222D. Provides power for up to six Wall-o-Matics.
S.104	33½ AUTO SPEED KIT Part No. 508480		Kit to equip 'Q' Models for intermixed use of 45 r.p.m. and 33½ r.p.m. 7" records.
	MICROPHONE PREAMPLIFIER SYSTEM		A valuable accessory ideal for paging, announcing or entertaining through phonograph sound system. Kit comprises microphone, pre-amplifier unit and power unit.
S.105	Type T.M.P.S. 2—56		Suitable for models 220—222D—Q100 and Q160.
S.106	Type T.M.P.S. 3—56		Suitable for models Y100—Y160—AY100 and AY160

Cat. No.	Description and Part Number		Function
S.107	COIN DENOMINATION COUNTER		Records the number of 3d., 6d., 1/- and 2/- pieces deposited in cash box. Counter dials viewed only when cash box is open. Perfect safeguard against unauthorised interference with cash box contents. Readings should also correspond with those of the playmeter, thus giving a check on 'free play'.
	REMOTE VOLUME AND RECORD REJECT CONTROL		Indispensable adjunct to the modern phonograph for remote control of volume coupled with remote rejection of records. Essential accessory which can be fitted behind bar or counter for easy remote control of volume to suit constantly changing location needs. Prevents unauthorised public access to volume of machine. Automatically balances volume of stereophonic speakers and maintains balance between bass and treble at all stages of volumes. Can be fitted any distance from machine up to 60 ft.
S.108	MRVC/3		Direct monaurally operated control suitable for use with monaural model Q160.
S.109	RSVC/1		Direct monaurally operated control suitable for use with stereo models 220 — 222 — Q100 — Q160 — HQ100SR and HQ160SR.
S.110	PRVC/2		Power driven remote control suitable for use with monaural or stereo models AY100 — AY160 — AY100U—HY100UR—HY160UR.

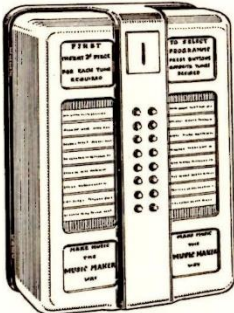
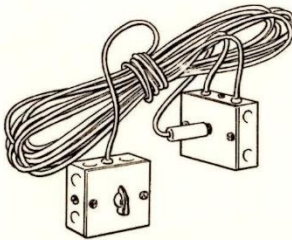


EXTENSION LOUD SPEAKER UNITS

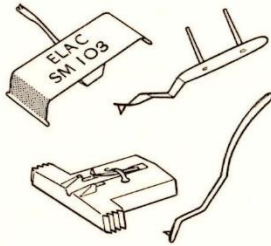
 
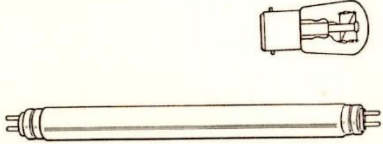
Cat. No.	Description and Part Number		Function
LS.100	WALL (OR CORNER) MOUNTING UNIT		An 8" wall mounting heavy-duty high-fidelity loud speaker unit in a stylish streamlined cabinet measuring $16\frac{3}{4}" \times 12\frac{1}{2}" \times 7\frac{1}{2}"$ and finished in black with walnut side panels. For use with Music Maker SEEBURG. Incorporates constant voltage transformer tapped to give four volume levels. Can be modified for use with all makes of Phonograph with from 5 to 15 ohms impedance.
LS.101	CORNER MOUNTING ADAPTOR BRACKET		When it is more convenient to mount the LS100 in a corner position this simple bracket is all that is required.
LS.102	WALL MOUNTING UNIT		An 8" flat wall mounting loud speaker unit fitted in a shapely wooden and fabric cabinet finished in beige and gold. Measures—top $16\frac{1}{2}" \times$ bottom $12" \times$ high $20\frac{1}{2}" \times$ deep $5\frac{3}{4}"$. For use with Music Maker T100—T200—P200—PT100 and all other makes of Phonographs with 5 ohms impedance.

Cat. No.	Description and Part Number		Function
LS.103	TWIN CEILING MOUNTED PENDANT UNIT		The LS100 loud-speaker mounted in pairs (or in fours if specially ordered) for ceiling suspension. Designed to provide uniform sound distribution in large rooms, lounges etc. Measures (in pairs) $16\frac{3}{4}" \times 12\frac{1}{2}" \times 16"$ other details as LS100.
LS.104	CEILING SUSPENDED OMNIDIRECTIONAL UNIT		A prestige loud speaker (approved by the Council of Industrial Design) for chain suspension where high ceilings make it desirable to suspend the speaker at a lower level. This loud-speaker is of metal construction, is $22\frac{1}{2}"$ diameter $\times$ $9\frac{1}{2}"$ high and is in a silver hammer finish. It is suitable for use with all Music Maker models (except Music Maker SEEBURG) and all other Phonographs with from 5 to 15 ohms impedance and can be used as an alternative to LS103.
LS.105	WALL CORNER OR FREE STANDING BRONZE BAFFLE LOUD SPEAKER		This is a universal speaker for wall or corner and is ideal for use with the smaller range of phonographs and can be mounted almost anywhere. The normal cabinet is of polished wood with an expanded metal grill. This cabinet can also be painted in other colours if needed. Suitable for use with 16/45—H16/45—MM30—T100—T200—PT200 or any make of Phonograph with a 15 ohms output. Size $15" \times 5" \times 10\frac{3}{4}"$.

GENERAL ACCESSORIES

Cat. No.	Description and Part Number		Function
D.100	SIXTEEN SELECTION WALL BOX		A 16 selection remote control wall box designed for sole use with the Music Maker H16/45 in small locations where space restrictions render the installation of a cabinet model phonograph impossible or undesirable. Attractively finished in play-appealing gold and chrome it measures only $17\frac{1}{2}'' \times 13\frac{1}{2}'' \times 6\frac{1}{2}''$. Up to six units can be brought into use with the machine. The cable length between the machine and wall box should not exceed 60 ft.
D.101	REMOTE VOLUME CONTROL		Should not be fitted more than 60 ft. from the machine. Essential accessory which can be fitted behind bar or counter for easy remote control of volume to suit constantly changing location needs. Prevents unauthorised public access to volume of machine. Suitable for 16/45—H16/45—MM30.
D.102			" " T.100
D.103			" " T.200
D.104			" " P.200M
D.105			" " P.200S
D.106			" " PT.200

PACKS OF ESSENTIAL SUPPLIES

	Cat. No.	Description	Machine type	Quantity per pack	Price		
					£	s.	d.
	ES.100	Stylii	16/45	2		12	0
	ES.101	"	H16/45	2		12	0
	ES.102	"	MM30	2		12	0
	ES.103	"	T.100	2		19	6
	ES.104	"	T.200	2		19	6
	ES.105	"	P.200M	2		19	6
	ES.106	Stylii Stereo	P.200S	2	2	15	0
	ES.107	" "	PT.200	2	2	15	0
	ES.108	Stylii Armature Assemblies	SEEBURG	1 pair	3	19	0
	ES.111	Title Cards	16/45	12 sheets of 16		5	9
	ES.112	" "	H.16/45	" " " "		5	9
	ES.113	" "	MM30	50		5	9
	ES.114	" "	Others	50		5	9
	ES.120	Fuses	SEEBURG	Kit		10	0
	ES.121	"	Others	"		5	0
	ES.126		16/45	Set		3	8
	ES.127		H.16/45	"		6	10
	ES.128		MM30	"		19	6
	ES.129		T.100	"	1	19	4
	ES.130		T.200	"	3	13	5
	ES.131		T.200 Mod.	"	2	6	11
	ES.132	LAMPS (Fluorescent tubes where applicable)—Spare sets	P.200	"	3	3	8
	ES.133		PT.200	"	3	5	11
	ES.134		222D	"	2	16	8
	ES.135		Q.160	"	2	10	4
	ES.136		AY.160	"	2	15	8
	ES.137		AY.160.U	"	2	13	0
	ES.138		HQ.160.SR	"		3	10
	ES.139		HY.100.UR	"		3	10

PRICE LIST

SEEBURG ACCESSORIES

S.100	100 selection Wall-O-Matic	£126	0	0
S.101	160 " " "	£135	0	0
S.102	" " " " "	£135	0	0
S.103	Remote Control Stepper unit	£72	0	0
S.104	33 $\frac{1}{3}$ Auto Speed kit	£51	0	0

S.105	Microphone Pre-amp system type TMPS-2-56	£96	15	0
S.106	" " " " TMPS-3-56	£96	15	0
S.107	Coin denomination counter	£51	0	0
S.108	Remote volume and record reject control Type MRVC/3	£7	10	0
S.109	" R SVC/1	£8	15	0
S.110	" PRVC/2	£11	17	6

EXTENSION LOUD SPEAKERS

LS.100	Corner or wall mounting unit	£13	14	6
LS.101	Corner mounting bracket	£1	1	0
LS.102	Wall mounting unit	£10	0	0

LS.103	Twin ceiling mounted pendant	£29	10	0
LS.104	Ceiling suspended omnidirectional unit	£9	5	0
LS.105	Wall, corner or free standing unit	£5	17	6

GENERAL ACCESSORIES

D.100	16 Selection Wall Box	£35	0	0
D.101	Remote volume control for 16/45, H16/45, MM30	£5	10	0
D.102	Remote volume control for T.100	£3	10	0

D.103	Remote volume control for T.200	£3	10	0
D.104	" " " " P.200M	£3	10	0
D.105	" " " " P.200S	£4	15	0
D.106	" " " " PT.200	£6	10	0

REVISED VALVE PRICE LIST

UM305	KT66	Valve	1	14	11
UM304	PX4	„	1	9	1
UM303	U14	„		14	7
UMT701	ECC81	„		12	10
UM306	B65	„	1	1	7
UM302	U50	„		14	7
UM301	U52	„		17	6
UT501	EZ81	„		8	2
UT502	EL84	„		11	1
UT503	ECC82	„		12	10
UT504	ECF80	„		14	7
TPT214	ECC83	„		12	10

TPT209	EL86	Valve		15	2
S163	7199	„	1	3	4
S164	12BH7-A	„	1	9	1
S165	6L6-GB	„	1	17	6
S166	6EU7	„		18	1
S167	6973	„		19	9
S168	5U4G	„		17	6
S169	6BJ6	„		13	5
S170	6X4	„		8	9
S171	12AX7	„		12	10
S172	OA2	Voltage Stabilizer		12	9
S173	2050	Thyratron	2	10	0

SPARES – MUSIC MAKER 16/45

Cat. No.	Part No.	Description	Price £ s. d.		
UM307		Stylus		6	6
UM308		Crystal Cartridge HGP39/3	2	8	0
UM309		Pick-up Arm	4	15	4
UM310		Plastic Record Tray Holder		3	3
M201	H2 SA 1/15	Selector Button		1	9
M202	H2 SA 1/14	Cancellator Button		1	9
UM311	HSA 14/9	Spring Arm		5	6
UM312	HSA 23/37a	Large Fibre Gear and Clutch	6	6	0
UM313	HSA 23/4	Clutch Cam		3	6
UM314	HSA 1112	Drive Wheel Assembly	4	9	3
UM315	HSA 8/10	"U" Plate		3	9
UM316	HSA 4/2	Selector Block		3	0
UM317	HSA 7/4	Worm Gear	2	5	0
UM318	HSA 1111	Worm Gear	2	9	6
UM319	HOS 36	Leather Washer			8
UM320	HSA 44/1	Ball Clutch Body	1	8	6
UM321		Grub Screw $\frac{5}{16}$ "			5
UM322		Ball Bearing $\frac{3}{16}$ "			1
UM323	HOS 272	Clutch Spring $\frac{3}{16}$ "			7
UM324	HOS 135	B.T.H. Motor (new)	8	5	0
UM325	H2 OS 270	Amplifier (Recond.)	5	0	0
UM305		„ Valves KT66	1	3	3

Cat. No.	Part No.	Description	Price £ s. d.		
UM304		Amplifier Valve PX4	1	13	2
UM303		„ Valve U14	16	7	7
UMT701		„ Valve ECC81	14	7	7
UM306		„ Valve B65	1	4	7
UM302		„ Valve U50	16	7	7
UM301		„ Valve U52	19	11	11
UM327		Micro Switch Coin. 3d. CRW R/301	11		9
UM332		Micro Switch Coin. 6d. V4-12	16		7
UM328		Micro Switch Motor CR/RL	10		6
UM329		Micro Switch H.T. Amp BRS	9		3
UM352		Micro Switch Knock Off V4-12	16		7
UM334		Magnet Coil 12 Volt	15		0
UM335		Transformer Rectifier 12V	7	0	0
UM336	HOS 17	Spring			8
UM337	HOS 42	Spring			6
UMT707		Fuse 3 amp			6
UM338		Fuse 0.5 amp			6
UMT702	H2 OS 282	D.P. Toggle Switch	6		0
UM326		B.T.H. Motor Reconditioned	6	12	6
M203		Bulb 15 watt. B.C.	1		10
UM339	HSA 44/2	Ball Clutch Spigot	15		4
UM340		H.T. Plug amp L1116/S	2		8

MUSIC MAKER 16/45 (Continued)

Cat. No.	Part No.	Description	Price £ s. d.		
UMT703		Bulgin Plug		1	9
UMT704		Bulgin Socket		2	9
UM341	HSA 1023	Support Casting Pick-up		14	6
UM342	HSA 1201	Castors Rubber		6	6
UM343		Jack Plug		3	5
UM344		Jack Socket		4	0
UM345	HSA 1025	Ramp Pick-up		5	0
UM346		Plug 5 amp 2 pin			10
UM347		Plug 2 amp 2 pin		1	1
UM348		Black Knobs for Amplifier			10
UM349		Pad Locks		7	6
UM350		Pick-up Head Mounting		13	4

MUSIC MAKER H16/45

Cat. No.	Part No.	Description	Price £ s. d.		
UM351		Bulb for Wall Box 12VSBC		1	8½
UM331		Coin Micro Switch CRW2		10	11
M401		Mini Trip 750 m.a.		2	7
M402		Wall Box Lock		9	0
UMT707		Mains Fuses 3 amp Slo-Blo		2	6
UM330		Micro Switch CRW		11	2
M403		Transformer Rectifier 24 volt	8	10	0
UM340		H.T. Plug Amp L.1116/S		2	8
UMT703		Bulgin Plug		1	9
UMT704		Bulgin Socket		2	9
M404		Selection Button			9
UM341	HSA 1023	Support Casting Pick-up		14	6
M405		Castors		4	6
UM343		Jack Plug		3	5
UM344		Jack Socket		4	0
UM345	HSA 1025	Ramp Pick-up		5	0
UM346		Plug 5 amp 2 pin			10
UM347		Plug 2 amp 2 pin		1	1
UM307		Stylus		6	6
UM308		Crystal Cartridge HGP 39/3	2	8	0
UM309		Pick-up Arm	4	15	4
UM310		Plastic Record Tray Holder		3	3

MUSIC MAKER H16/45 (Continued)

11

Cat. No.	Part No.	Description	Price £ s. d.
UM311	HSA 14/9	Spring Arm	5 6
UM313	HSA 23/4	Clutch Cam	3 6
UM314	HSA 1112	Drive Wheel Assembly	4 9 3
UM318	HSA 1111	Worm Gear	2 9 6
UM312	HSA 23/37A	Large Fibre Gear Assembly	6 6 0
UM317	HSA 7/4	Worm Gear	2 5 0
UM315	HSA 8/10	"U" Plate	3 9
UM319	HOS 36	Leather Washer	8
UM320	HSA 44/1	Ball Clutch Body	1 8 6
UM321		Grub Screw $\frac{5}{16}$ "	5
UM322		Ball Bearing $\frac{3}{16}$ "	1
UM323	HOS272	Clutch Spring	7
UM324		B.T.H. Motor New	8 5 0
UM326		B.T.H. Motor Reconditioned	6 12 6
UM325		Amplifier Reconditioned	5 0 0
UM305		Amplifier Valve KT66	1 3 3
UM304		Amplifier Valve PX4	1 13 2
UM303		Amplifier Valve U14	16 7
UMT701		Amplifier Valve ECC81	14 7
UM306		Amplifier Valve B65	1 4 7
UM302		Amplifier Valve U50	16 7
UM301		Amplifier Valve U52	19 11

Cat. No.	Part No.	Description	Price £ s. d.
UM348		Black Knobs for Amplifier	10
UM349		Pad Locks	7 6
UM350		Pick-up Head Mounting	13 4
UM328		Micro Switch CR/RL	10 6
UM329		Micro Switch BRS	9 3
UM352		Micro Switch V4-12	16 7
UM334		Magnet Coil 12 volt	15 0
UM336	HOS 17	Spring	8
UM337	HOS 42	Spring	6
UMT702	H2 OS 282	D.P. Toggle Switch	6 0
UM339	HSA 44/2	Ball Clutch Spigot	15 4
UM340		HT Plug Amp L1116/S	2 8
UMT703		Bulgin Plug	1 9
UMT704		Bulgin Socket	2 9
UM341	HSA 1023	Support Casting Pick-up	14 6
UM343		Jack Plug	3 5
UM344		Jack Socket	4 0
UM345	HSA 1025	Ramp Pick-up	5 0
UM346		Plug 5 amp 2 pin	10
UM347		Plug 2 amp 2 pin	1 1
UMT707		Fuse 3 amp	6
UM338		Fuse 0.5 amp	6

SPARES – MUSIC MAKER 30

Cat. No.	Part No.	Description	Price £ s. d.		
UM307		Stylus		6	6
UM308		Cartridge	2	8	0
UM309	HSA 1077	Pick-up Arm Ass'y	4	15	4
UMT706		Fluorescent Tube		17	10
UMT705		Fluorescent Starter		2	9
M601		Green Signal Dome only			11
M602		Green Signal Dome Complete		4	1
M603	HSA 1216	Select Arrow Switch		6	2
M604	HSA 1217	Plastic Button for Switch		2	3
UM351		Bulb 12 volt SBC		1	9
M605	HSA 1239	Perspex Front	8	15	0
M606	HSA 1204	Large Stars		6	0
M607	HSA 1203	Small Stars		4	6
M608	HSA 1065	Turntable Rubber Mat		3	9
UM352		Knock Off Micro Switch V4-12		16	7
UM332		6d. Coin Micro Switch V4-12		16	7
UM333		1/- Coin Micro Switch V4-14		17	2
UM327		3d. Coin Micro Switch CRWR/30		11	9
M609		Motor Cut Off Micro Switch V3		7	2
M610		Indexing Arm Micro Switch CRS		9	3
UM334		12 Volt Coil		15	0
M611	HSA 1059	Selection Pins		2	0

Cat. No.	Part No.	Description	Price £ s. d.		
M612		National Coin Rejector	8	9	0
M613		Uni-selector Ass'y (Recond.)	4	0	0
M614		Control Panel (Recond.)	5	0	0
UM312	HSA.23/37A	Large Fibre Gear	6	6	0
UM314	HSA.1112	Fibre Drive Wheel Assembly	4	9	3
UM318	HSA.1111	Worm Gear	2	9	6
UM317	HSA.7/4	Worm Gear	2	5	0
M615		"Selector Button" Panel		4	0
M616	HSA.1240/41	Title Panels	2	10	0
M617	HSA.1213	Selector Knobs	2	12	6
UM341	HSA.1023	Support Casting Pick-up		14	6
M618		Relay 325-52/C42/12	1	9	8
UM311	HSA 14/9	Spring Arm		5	6
UM313	HSA 23/4	Clutch Cam		3	6
UM315	HSA 8/10	"U" Plate		3	9
UM319	HOS 36	Leather Washer			8
UM320	HSA 44/1	Ball Clutch Body	1	8	6
UM321		Grub Screw $\frac{5}{16}$ "			5
UM322		Ball Bearing $\frac{3}{16}$ "			1
UM323		Clutch Spring $\frac{3}{16}$ "			7
UM324	HOS 135	B.T.H. Motor New	8	5	0
UM326		B.T.H. Motor Reconditioned	6	12	6

SPARES — MUSIC MAKER 30 (Continued)

Cat. No.	Part No.	Description	Price £ s. d.
UM325		Amplifier Reconditioned	5 0 0
UM305		„ Valves KT.66	1 3 3
UM304		„ „ PX.4	1 13 2
UM303		„ „ U.14	16 7
UMT701		„ „ ECC.81	14 7
UM306		„ „ B.65	1 4 7
UM302		„ „ U.50	16 7
UM301		„ „ U.52	19 11
UM339	HSA 44/2	Ball Clutch Spigot	15 4
UMT702	H2OS 282	D.P. Toggle Switch	6 0
UM335		Transformer Rectifier 12v	7 0 0
UM348		Black Knobs for Amplifier	10
UM349		Pad Locks	7 6
M619		Plug 3 pin L.1349/CP	6 3
M620		Socket „ L.1349/FS	4 4
UM350		Pick-up Head Mounting	13 4
UM340		H.T. Plug Amp L.1116/S	2 8
UMT703		Bulgin Plug	1 9
UMT704		Bulgin Socket	2 9
UM342	HSA 1201	Castors Rubber	6 6
UM343		Jack Plug	3 5
UM344		Jack Socket	4 0

Cat. No.	Part No.	Description	Price £ s. d.
UM345	HSA 1025	Ramp Pick-up	5 0
UM346		Plug 5 Amp 2 pin	10
UM347		Plug 2 Amp 2 pin	1 1
UM328		Micro Switch Motor CR/RL	10 6
UM331		„ „ CRW.2	10 11
UM330		„ „ CRW	11 2
UMT707		Fuse 3 Amp	6
UM338		Fuse 0.5 Amp	6

SPARES – MUSIC MAKER T100

Cat. No.	Part No.	Description	Price £ s. d.		
UT505		Sapphire Styli		11	3
UT506		Cartridge Sapphire KST 11	3	13	6
T101		Fluor. Tube Top (18")		10	5
T102		Fluor. Tube Long (24")		17	10
UT507		Dial Bulb 60 volt, 0.04 amp		3	9
T103		Dial Reconditioned	5	19	0
T104		Main Relay Unit Reconditioned	10	17	6
UT508		021 Key		4	1
T105		Front Lid Lock	1	6	0
T106		Back Door Lock	1	2	3
UT509		Cash Box Lock		19	10
T107		Cash Box Door		6	6
T108		Plastic Louvres (Inner)	1	2	11
T109		„ „ (Outer)	1	2	11
T110	T100-2-27	Nylon Turntable Cones		6	9
T111		Coin Micro Switches		14	7
T112	T100/9/17A	Plastic Title Holder (Pair)	2	8	2
T113		Credit Unit Reconditioned	3	15	0
T114		Rubber Wheels Turntable		10	7
T115		Pick-Up Arms Complete	3	5	4
T116		Carousel Motor	5	16	1
T117		Rubber Belts Turntable Motor		1	7½

Cat. No.	Part No.	Description	Price £ s. d.		
T118	T100-2-30	Turntable Motor	6	19	5
T119		Changer Mtr (Geared) Recond.	10	10	0
T120		Fuses 0.25 amp		1	6
UT510		Fuse 0.8 amp		1	2
UMT707		Fuse 3 amp			6
T121	T100-9-29	Set Finger Cont. (Top Lid)		3	4
T122	T100-1-14	Pair „ „ (For Cams)		2	4
UT527		Select Coil		13	6
UT528		Cancel Coil		13	6
T123		Leather Belt (60" Length)		4	6
T124		Rectifier Type G1	1	11	1
T125	T100-6-11	Finger Contacts		4	10
T126	T100-3-8	Pick-up Arm Shaft		3	9
T127	T100-3-2	Pick-up Arm Bush		2	0
T128		Amplifier Reconditioned	9	10	0
UT501		Amplifier Valve EZ81	9	4	
UT502		Amplifier Valve EL84	12	7	
UMT701		Amplifier Valve ECC 81	14	7	
T129	3V111 510/11	Main Fibre Gear	2	3	11
T130		Retainer stud for Reduction		1	8
		Pulley T100 Turntable Motor			
T131	T100-6-6/7	Sliding Contact Assembly		4	6

SPARES – MUSIC MAKER T100 (Continued)

Cat. No.	Part No.	Description	Price		
			£	s.	d.
UT511	200-11-44	Reject Button Switch		8	11
UT512		Uni Selector Oper. Arm		3	9
UT513		Back Stop Ratchet Spring		1	0½
UT514		“Sude” Interrupter Switch	2	16	8
UT515		Three Pole Flat Plug TS10		3	6
UT516		Rubber Mounting for Motor		2	8
T132		Volume Control		3	4
UT517		Cash Bag		9	9
UMT702		Double Pole Toggle Switch		6	0
UMT703		Bulgin Plug		1	9
UMT704		Bulgin Socket		2	9
T133		Fuse 2 amp		2	1
UMT705		Flourescent Starter Lamp		2	9

SPARES – MUSIC MAKER T200

Cat. No.	Part No.	Description	Price £ s. d.		
UT518	200-11-34	Coin Mask with reject Button		13	4
T201		Main Relay Unit (recond.)	8	12	6
T202	200-VM5-7	Cog Wheel Clutch (long shaft)	1	19	0
UT519		„ „ „ (short „)	1	19	0
UT520	200-8-31	Contact Spring		3	4
UT521	200-8-30	Sliding Contact and Carriage		11	1
T203		Pickup Arm complete	4	0	3
UT522		Carousel Drive Belts		9	8
UT523		Fuse Holder D.C. Power Pack		3	4
UT511	200-11-44	Corrector Button Switch		8	11
T204	200-11-41	Corrector Button (Plastic)		1	8
UT524	200-1-72-73 and 18	Contact Holder with Fingers		4	10
T205	200-4-16	Pickup Push Plate		5	0
UT525		Back Door Locks		19	10
UT526		Gearbox Unit complete (Rec.)	3	9	0
T206	200-11-1	Perspex facia Top	5	9	4
T207	200-11-11	Perspex Ornamental Bottom	7	16	0
UT527		Selector Magnet Coil		13	6
UT528		Cancel „ „		13	6
UT529		Record Centering „		15	2
T208		Coin Delivery Tubes (set of 2)		19	8
T209		Rubber Belts Changer Motor		7	11

Cat. No.	Part No.	Description	Price £ s. d.		
UT509		Cash Box Lock		19	10
T210		„ „ Door		6	6
UT530	200-VM5-4	Large Gear with Chain Dr. (R)	1	5	1
UT531		National Coin Rejector	11	5	0
T211	200-5-45	Changer Motor Long Shaft	16	12	4
UT532		„ „ Short Shaft	16	12	4
T212		Dial Unit (new)	9	3	4
T213		Dial Unit (reconditioned)	5	19	0
UT533	200-1-38/11	Rubber Drive Wheels Turnta.	1	1	5
UT534	200-2-20	Record Centering Plate Comp.	1	6	5
T214	200-5-55	Brake Magnet Changer Motor	2	11	8
T215	200-11-28	Drive Belt Changing Lights		3	6
T216		Selector Motor	4	2	8
UT535		Magazine Motor	5	0	5
UT536	200-1-10	Turntable Motor only	4	15	7
T217		Micro Switch Coin 3d.	1	3	7
T218		„ „ „ 6d.	1	3	7
T219		„ „ „ 1/-	1	3	7
T220		Rear cream quilted board	4	13	4
T221		Front „ „ „	2	16	0
T222		Plastic Title Holder	6	1	1
T223		Micro Switch Type 925R		16	11

SPARES — MUSIC MAKER T200 (Continued)

Cat. No.	Part No.	Description	Price £ s. d.
T224		Front Panel Looks	1 6 0
UT508		021 Keys	4 1
UT506		Crystal Cartridge KST11	3 13 6
UT537		Extended Play Lampholders	6 6
UT512	HV 820	Uniselector Operating Arm	3 9
UT513		Back Stop Ratchet Spring	1 1
UT514		"Sude" Self Interrupter Sw.	2 16 8
UT515		3 Pole Flat Plug TS10	3 6
UT507		60V 0.04A Dial Bulbs	3 9
UT538		Fluorescent Tube 16W	1 11 1
T225		Bead Moulding 40 m.m. per ft.	3 2
T226		" " 20 m.m. per ft.	3 2
UT539		250 Mfd. 110 VWDC Capacitor	18 6
UT540		Spark Quench Cap. SK500R/2	13 0
UT541	1400/6 m.m.	Circlip 6 M M	3
UT542	Z13B3X	Rectifier Metal (Power Pack)	1 3 6
UMT705		Fluorescent Starters	2 9
UMT706		Fluorescent Tube Yellow 20W	17 10
T227		Amplifier (Recond).	9 0 0
UT501		Amplifier Valves EZ81	9 4
UT502		" " EL84	12 7
UMT701		" " ECC81	14 7
UT516		Rubber Mounting (for Motor)	2 8
T228		Leaf Type Coin Switches	2 1 4
T229		Hinged Front Panel	2 17 0
T230		Felt Brake—Clutch	6
UT534	200-5-5	Felt Brake Pad—Motor	1 2

Cat. No.	Part No.	Description	Price £ s. d.
UT545	200-2-1	Record Centering Spindle	7 6
T231		Volume Control 50K	3 4
UT546		D.C. Power Unit	11 9 2
T232	200-11-19/20	Reject Coin Cover	7 9
UT517		Cash Bag	9 9
UT505		Sapphire Styli	11 3
UT545	200-4-5	Tone Arm Tension Spring	8
T233	200-8-16	Selector Rod Spring for 100's	10
T234	200-8-15	" " " " 200's	10
UT548	200-2-22	Felt Washer Record Plate	2
UT549	200-2-11	Compression Spring	1 3
UT550	200-8-29	Spring Arm	1 3
UT551	200-1-67	Torsion Spring	11
UT552	200-1-64	Tension Spring	11
UT553	200-1-38/IV	" "	8
UT554	200-10-3	Back Stop Brake	9 0
T235	200-10-5	Torsion Spring	1 0
T236	200-10-14	Pressure Spring (Motor)	1 11
UT555	200-3-7	Tension Spring (Arms)	3 3
UT556	200-5-25	" "	1 6
T237	200-5-39	Tension Spring (Felt Brake)	8
UMT702		Double Pole Toggle Switch	6 0
UMT703		Bulgin Plug	1 9
UMT704		" Socket	2 9
UMT707		Fuse 3 amp. 1¼" × ¼"	6
UT557		Fuse 0.5 amp	1 2
UT510		Fuse 0.8 amp	1 2

SPARES – MUSIC MAKER P200

Cat. No.	Part No.	Description	Price £ s. d.		
UT505		Stylus Mon		11	3
UT506		Stylus Stereo	1	16	0
TP201	P200-11-35	A and B Switch		14	5
TP202		15 watt SES Prog. Lamp		2	2
TP203		3V 0.25 A Lense Lamp		1	8
TP204		60 V 0.02A Bulb (A and B tn)		3	9
TP205		7V 0.1A Bulb		2	6
TP206		Cartridge Mon	3	13	6
UT559		Cartridge Stereo	5	19	0
UT560		13 watt. Fluoro Tube		13	8
UT525		Door Lock		19	10
UT509		Cash Box Lock		19	10
UT522		Carousel Drive Belt		9	8
UT529		Centering Magnet Coil		15	2
UT527		Select Magnet Coil		13	6
UT528		Cancel Magnet Coil		13	6
UT536	P200-1-10	Turntable Motor	4	15	7
UT546		Power Pack D.C.	11	9	2
UT542		Power Pack Met. Rect.	1	3	6
UMT703		Bulgin Plug		1	9
UMT704		„ Socket		2	9
TP207		Side Door		17	0

Cat. No.	Part No.	Description	Price £ s. d.		
UT533	200/1/38	Turntable Drive Wheel	1	1	5
UT534	200/2/15-20	Rec. Centring Plate	1	6	5
UT561		4-5 Mfd. Motor Capac.	2	0	10
UT540		Spark Quench Capac.		13	1
UT532	P200-5-3	Changer Motor Mech.	16	12	4
UMT702		D.P. Toggle Switch		6	0
UT519		Nylon Cog Wheel Clutch	1	19	0
UT530	200/VM5/4	Large Fibre Gr. and Ch. Ass. Rec.	1	5	1
UT543	P200-5-5	Felt Brake		1	1
UT570		Felt Brake Spring			8
UT562		Coin Switch Ass.	3	6	8
UT563	P200-11-24	Front Speaker Grill	4	5	6
TP208		25-K Volume Control		3	4
TP209		25-K + 25K. Dual Gang VIcon.		12	10
TP210	P200/8/33	Title Crd. Hlds. (Plastic)	2	7	3
TP211	P200-11-34c	Coin Msk. with Rej. Button		13	4
UT564		Front Plastic Facia	13	5	0
TP212	P200/8/29	Sliding Con. Carriage		11	1
TP213		Main Relay Unit	55	11	1
UT565		Pick-up Arm complete	4	0	3
UT503		ECC 82 Valve	14	7	
UT504		ECF 80 Valve	16	7	

SPARES — MUSIC MAKER P200 (Continued)

Cat. No.	Part No.	Description	Price £ s. d.
UT502		EL 84 Valve	12 7
UT501		EZ 81 Valve	9 4
UT566		Starter Switch (Fluor. Tube)	2 9
TP214	200/10/34-5-10	Sel. Rim Assembly	1 1 5
UT567	P200-11-25	Music Maker Emblem	2 13 11
UT554	200/10/3	Back Stop Brake	7 6
TP215		Cam Contact Ass.	4 12 8
UT568	P200-11-30	Coin Reject Cup	7 0
TP216		Selector Hd. Wheel Ass.	1 11 8
UT535		Magazine Motor	5 0 5
UT557		0.5 Amp. Slo-Blo Fuse	1 2
UT510		0.8 Amp. Slo-Blo Fuse	1 2
UMT707		3.0 Amp. Fuse $1\frac{1}{4}'' \times \frac{1}{4}''$	6
TP217		Sliding Con. Spring	3 4
UT523		Fuseholder D.C. Power Pk.	3 4
UT511	T200-11-44	Reject Button Switch	8 11
UT524	T200-1-72/73	Con. Holder with F'gers	4 10
UT526		G/Box Unit Com. (Recond.)	2 13 8
UT531		National Coin Reject	11 5 0
UT539		250 Mfd. 110v W.D.C. Cap	18 6
UT541		Circlip 1400/6 m.m.	3
TP218		Amplifier (Recond.)	9 10 0

Cat. No.	Part No.	Description	Price £ s. d.
UT537		Lamp Holders (A & B + Select)	6 6
UT516		Rubber Mounting (Mtr.)	2 8
UT545	T200-2-1	Record Centring Pla. Spind.	7 6
UT517		Cash Bag	9 9
UT548	T200-2-22	Felt Washer	3
UT547	T200-4-5	Tension Spring—Tone Arm	8
UT549	T200-2-11	Comp. Sp'g—Centering Plate	1 3
UT550	T200-8-29	Spring Arm	1 3
UT551	T200-1-67	Torsion Spring	11
UT552	T200-1-64	Tension Spring	11
UT553	T200-1-38-1V	Tension Spring	8
UT555	T200-3-7	„ „ —Lift Arms	3 3
UT556	T200-5-25	„ „	1 6
UT569	P200-7-11	Torsion Spring (Back St. Bke.)	1 0
TP219		Main Relay Unit (Recond.)	6 15 0
UMT701		ECC 81 Valve	14 10

SPARES – MUSIC MAKER PT200

Cat. No.	Part No.	Description	Price £ s. d.		
TPT201		Main Relay Unit	69	8	11
TPT202		Dialling Unit Ass.	18	1	1
TPT203		Dial Disc (Red)		6	8
UT558		Stylus Stereo	1	10	0
UT559		Cartridge Stereo	5	19	0
UT538		16 watt 70 cn Fluorescent Tube	1	11	1
UT525		Door Lock		19	10
UT509		Cash Box Lock		19	10
UT522		Carousel Drive Belt		9	8
UT529		Centering Magnet Coil		15	2
UT527		Select Magnet Coil		13	6
UT528		Cancel Magnet Coil		13	6
UT536	P200-1-10	Turntable Motor	4	15	7
UT532	P200-5-3	Changer Motor Mechanism	16	12	4
TPT204		Selector Motor	7	10	7
UT546		Power Pack	13	15	0
UT542		Power Pack Metal Rectifier	1	3	6
UMT703		Bulgin Plug		1	9
UMT704		„ Socket		2	9
TPT205		Side Door		17	0
UT533	200-1-38	Turntable Drive Wheel	1	1	5
UT534	200-2-15/20	Record Centering Plate	1	6	5

Cat. No.	Part No.	Description	Price £ s. d.		
UT561		4.5 Mfd. Motor Capacitor	2	0	10
UT540		Spark Quench Capacitor		13	1
UMT702		D.P. Toggle Switch		6	0
UT519		Nylon Cog Wheel Clutch	1	19	0
UT530	200-VM5-4	Large Fibre Gear & Ch. Ass. Rec.	1	12	3
UT543	P200-5-5	Felt Brake		1	2
UT570		Felt Brake Spring			8
TPT206		Coin Switch Ass.	3	6	8
UT563	P200-11-24	Front Speaker Grill	4	5	6
TPT207		Title Card Holders (Plastic)	2	8	1
UT518		Coin Mask with Rej. Button		13	4
UT564		Front Plastic Facia	13	5	0
TPT208		Sliding Contact and Carriage		11	1
UT565		Pick-up Arm Complete	4	0	3
UT566		Starter Switch (Fluor. Tube)		2	9
UT567		Music Maker Emblem	2	13	11
UT554		Back Stop Brake		7	6
UT568		Coin Reject Cup		7	0
TPT214		ECC 83 Valve	14	7	
UT504		ECF 80 Valve	16	7	
TPT209		EL 86 Valve	13	11	
TPT210		Silicon Rectifier Type OA214	1	0	0

SPARES — MUSIC MAKER PT200 (Continued)

Cat. No.	Part No.	Description	Price		
			£	s.	d.
TPT211		Germanium Diode Type OA 81		3	0
UT557		0.5 Amp Slo-Blo Fuse		1	2
TPT212		1.2 Amp Slo-Blo Fuse		1	2
UMT707		3.0 Amp Fuse			6
UT549	T200-2-11	Spring—Record Centering Brake		1	3
UT547	T200-4-5	„ —Tone Arm			8
UT550	T200-8-29	„ —Arm		1	3
UT55M	T200-1-67	„ —Torsion			11
UT552	T200-1-64	„ —Tension			11
UT553	T200-1-38/IV	„ „			8
UT555	T200-3-7	„ „		3	3
UT556	T200-5-25	„ „		1	6
UT569	P200-7-11	„ —Torsion		1	0
UT548	T200-2-22	Felt Washer			3
TPT213		Main Relay Unit (Recond.)	6	15	0

SPARES – MUSIC MAKER SEEBURG

Cat. No.	Part No.	Description	Price £ s. d.		
S101	86321	Motor Capacitor	1	17	3
S102	245083	Motor Coupling Assy.	1	6	8
S103	245243	Brake Cam Lever Spring		3	4
S104	245248	Clutch Spring		2	6
S105	245550	Reset Lever Spring		1	8
S106	245552	Latch Lever Spring		1	8
S107	245573	Clutch Shifting Lever Spring		1	11
S108	245764	Detent Lever Spring		1	8
S109	245769	Control Lever Spring		1	8
S110	245773	Lock Lever Detent Spring		1	8
S111	245782	Drive Crank Spring		1	8
S112	245791	Compression Spring		1	3
S113	245792	Lock Lever Spring		1	3
S114	245816	Trip Switch	1	2	11
S115	245817	„ „ Balance Spring		2	3
S116	245948	Spring		3	9
S117	247214	Switch Lever Spring		1	8
S118	247510	Trip Solenoid	1	5	0
S119	247782	Pick-up Arm Spring		2	9
S120	247846	Reversing Switch Assy.	3	6	11
S121	247850	Pig Tail Fuse 5 Amp		1	3
S122	249148	Contact Plunger Block Assy.	2	16	10

Cat. No.	Part No.	Description	Price £ s. d.		
S123	249198	Indicator Lamp		2	8
S124	249235	Detent Switch	1	3	4
S125	249730	Magnetic Cartridge	17	18	4
S126	249731	Armature Assy. Sapphire	3	19	0
S127	249732	„ „ Diamond	22	2	10
S128	250251	Motor	33	2	6
S129	303087	Fuse Slo-Blo 2 Amp		2	6
S130	303590	Pulse Amplifier Unit	6	15	5
S131	303692	Fuse Holder		2	7
S132	303697	Fuse 3·2		2	6
S133	303713	Fuse 3·2 (Red Cap)		4	2
S134	305603	Amplifier Unit SHFA2-5	136	11	3
S135	305821	Volume Control (AY 160)	2	18	9
S136	305624	Volume Control (Q 160)		19	0
S137	400451	(SPU1) Sin. Price Unit	33	19	10
S138	401897	(3d., 6d. 1/-) Coin Switch & Cable Assy.	3	19	4
S139	401914	(3d., 6d., 1/- & 2/-) Coin Switch and Cable Assy.	5	19	2
S140	404659	Cash Bag		10	7
S141	409084	Fluorescent Lamp 25 watt, 28 ins.	1	10	4
S142	410684	Latch Solinoid Assy.	2	19	5
S143	411073	Snap Switch	1	7	6

SPARES – MUSIC MAKER SEEBURG (Continued)

Cat. No.	Part No.	Description	Price £ s. d.		
S144	450186	Credit Coil (ADD6) DPU1		15	2
S145	450198	„ „ (ADD6) D3WA		15	2
S146	450511	DPUI Dual Pricing Unit	62	7	4
S147	450683	Fuse Slo-Blo Pig Tail $\frac{1}{2}$ Amp		3	0
S148	451068	Solenoid Assy. ADD1 (USPU1)		8	6
S149	481410	Rear Door Lock (AY160)	1	0	8
S150	484359	Cash Door Assy. (Q160)	4	4	2
S151	484409	Cash Door Lock (AY + Q160)	1	3	11
S152	484710	Lid Glass Assy. Upper Stereo (Q160)	12	3	1
S153	484304	Lid Glass Assy. Lower Q160 (AY160)	12	10	5
S154	484872	Plastic Window Frame Assy.		10	10
S155	485717	Name Plate Frame (AY160)		7	6
S156	485601	Upper Lid Glass (AY160)	4	14	9
S157	485607	Lower Lid Glass (AY160)	10	4	7
S158	505590	Wall-O-Matic Lock D3WA	1	17	6
S159	505680	Programme Window D3WA	1	15	10
S160	602411	Fuse 5 Amp		2	4
S161		Keys F264		4	2
S162		USPU1 (AY160)	57	1	0
S163		Valves 7199	1	3	4
S164		„ 12BH7-A	1	13	1
S165		„ 6L6-GB	2	6	0

Cat. No.	Part No.	Description	Price £ s. d.		
S166		Valves 6EU7	18	1	
S167		„ 6973	19	9	
S168		„ 5U4G	19	11	
S169		„ 6BJ6	15	3	
S170		„ 6X4	10	0	
S171		„ 12AX7	14	7	
S172		Voltage Stabilizer OA2	11	3	
S173		Thyratron 2050	2	10	0
S174		Transistors 2N109	15	11	
S175		„ 2N591	11	8	
S176		Bulb No. 47	1	5	
S177	10242	„ „ 51	1	5	
S178	505173	„ „ 55	1	6	
S179	16076	„ „ 63	1	8	
S180		Fluorescent Starter Switch	2	9	
S181	451248	Fuse 1.6 Amp Slo-Blo	2	4	
S182		Fuse 0.650 Amp Slo-Blo	2	6	

SPARES — WURLITZER — EX U.S.A.

Cat. No.	Part No.	Description	Price		
			£	s.	d.
WA2000	984	Volume Control Key			8
WA2001	49884	Grommet			11
WA2002	57851	Micro Switch (Trip)	1	19	7
WA2003	59537	Pawl Assembly	1	6	1
WA2004	59569	Transfer Switch	3	2	1
WA2005	59626	Strap & Spring Assembly		3	11
WA2006	59871-A	Cable Assembly, Record Clamp		15	9
WA2007	59881	Sleeve, Brush Cable		1	2
WA2008	59891	Sleeve, Record Clamp Cable			11
WA2009	60518	Switch Ass. Latch		11	3
WA2010	60655	Safety Switch, Micro.	1	6	1
WA2011	60711	Guide Tip, L.H.			7
WA2012	60717	Solenoid—Pre-set	2	13	1
WA2013	60882	Rubber Mount T.T. Drive Motor		6	9
WA2014	61484	Guide Tip, R.H.			7
WA2015	61858	3 Amp. Fustat: S 32/10		3	3
WA2016	62670	Coin Bag		11	3
WA2017	62773	Spring			8
WA2018	62886	Slide Switch		6	9
WA2019	64500	Selenium Rectifier	4	3	5
WA2020	64722	Solenoid, Driver	3	16	8
WA2021	64766	Washer, Solenoid			3

Cat. No.	Part No.	Description	Price		
			£	s.	d.
WA2022	64780	Spring, Solenoid			3
WA2023	65069	Solenoid-Cancel	3	0	11
WA2024	65170	Mute & Play Switch & Bracket Ass.	3	3	2
WA2025	65170-1	Over-Center Spring		1	7
WA2026	65526	Stop, Guide Tip			11
WA2027	65730	Guide Tip, R.H.		9	0
WA2028	65731	Guide Tip, L.H.		9	0
WA2029	65812	Spring, Guide			6
WA2030	65881	Record Actuating Arm & Shaft L.H.	3	11	3
WA2031	65883	Record Actuating Arm & Shaft R.H.	3	11	3
WA2032	66082	Switch Assembly		2	10
WA2033	66128	Coin Magnet & Bracket Assembly		15	9
WA2034	68192	Coin Return Cup Casting		11	3
WA2035	68290	Guide Plate			11
WA2036	68496	Plunger, Selector Solenoid			11
WA2037	68594	Solenoid, Letter Selector		12	2
WA2038	68608	Plunger, Stop Solenoid		1	2
WA2039	68617	Solenoid, Selector Stop 2-0		18	2
WA2040	68804	Solenoid, Selector Stop 1	1	0	3
WA2041	69569	Caster		8	1
WA2042	70897	Resistor 1650 Ohms 15 Watt-	1	17	1
—	—	9000 ohms 10 watt			

SPARES — WURLITZER — EX U.S.A. (Continued)

Cat. No.	Part No.	Description	Price		
			£	s.	d.
S160	71590-27	Fuse 5 Amp MTH.		2	4
WA2043	71590-33	Fuse 8 Amp. GLH8		2	4
WA2044	71590-48	15A Fuse			6
WA2045	71591-10	800 m.a. Slo Blow		2	4
S181	71591-15	Fuse 1.6 amp MDL		2	4
WA2046	110558	Micro Switch	1	7	0
WA2047	110965	25 watt. 30" Fluorescent Lamp, Wht.	1	13	11
WA2048	111816	Lamp—2-pin		2	8
WA2049	111817	Socket—2 pin		2	10
WA2050	111913	Motor & Gear Assy.	7	19	3
WA2051	112494	Relay	4	3	5
WA2052	113204	Pivot Casting & Arm Assy.	15	15	0
WA2053	114138	Needle Stereo Sapph. (Model 2300)		9	3
WA2054	115975	Solenoid—Driver	3	14	5
WA2055	116073	Star Casting Medallion		19	1
WA2056	116169	Switch Assembly (Letters)	2	1	10
WA2057	116179	Selector Switch Assembly (Nos.)	5	15	4
WA2058	116723	Slide Switch, Spring Return		4	5
WA2059	116724	Slide Switch		2	5
WA2060	116905	T'ntable Drive Motor & Worm Assy.	11	0	4
WA2061	116986	Gear & Ratchet Wheel Assy.	3	16	8
WA2062	117252	Plate & Pin Assembly		4	6

Cat. No.	Part No.	Description	Price		
			£	s.	d.
WA2063	118332	Record Guide Plate	1	7	0
WA2064	118412	Lock & Key Assy. Cash Box Door	2	0	4
WA2065	118633	RW 95 Key.		3	9
WA2066	119107	Coin Switch Assembly	3	18	11
WA2067	119107A	Long Coin Paddle		3	2
WA2068	119107B	Short Coin Paddle		3	2
WA2069	119107C	Long Shaft		1	4
WA2070	119107D	Long Spacer		1	4
WA2071	119413	Shaft, T.T. Pilot Clamp Lever for Machines with Top Tunes re- quired only		6	9
WA2072	119420	Tubes, T.T. Pilot for Machines with Top Tunes required only	1	6	1
WA2073	119439	Plate & Arm Ass.	12	2	
WA2074	119744	Gear & Shaft Assy. R.H.		9	0
WA2075	119745	Gear & Shaft Assy. L.H.		9	0
WA2076	119790	Turntable Motor & Worm Assy.	14	7	7
WA2077	119824	"O" Ring, 45 R.P.M.		9	0
WA2078	119826	Solenoid Assy.	1	0	3
WA2079	119832	Pulley, 45, 50 cycles	1	7	0
WA2080	119833	Pulley, 33, 50 cycles	1	4	9
WA2081	120515	Medallion		16	8
WA2082	120696	Rectifier & Mounting Bracket Ass.	1	19	2
WA2083	120718	Lock Assy.		16	8

SPARES — WURLITZER — EX U.S.A. (Continued)

Cat. No.	Part No.	Description	Price		
			£	s.	d.
WA2084	121095	Solenoid	3	7	8
WA2085	121229	Trip Switch	2	2	9
WA2086	121491	Motor	7	19	2
WA2087	121881	Casting—Medallion	13	6	
WA2088	121894	Record Indicator Panel	6	9	
WA2089	121901	Selection Button	1	2	
WA2090	121905	Casting Top, R.H.	3	6	9
WA2091	121906	Casting Top, L.H.	3	6	9
WA2092	121908	Extrusion, Door Frame	12	13	8
WA2093	121909	Transfer Switch & Bracket Assy.	2	10	10
WA2094	121913	Extrusion, Canopy, Bottom	1	2	6
WA2095	121928	Extrusion, Top	2	7	3
WA2096	121933	Switch	11	3	
WA2097	121941	Tone Arm Sub. Assembly	3	9	9
WA2098	121944	Cartridge, Sonetone, Stereo	3	18	11
WA2099	121985	Extrusion & Paint Ass. A1-CO	9	0	
WA2100	121986	„ „ „ B1-GO	9	0	
WA2101	121987	„ „ „ F1-LO	9	0	
WA2102	121988	„ „ „ K1-QO	9	0	
WA2103	121989	„ „ „ P1-UO	9	0	
WA2104	121990	„ „ „ T1-VO	9	0	
WA2105	122016	Top Cover	4	10	2

Cat. No.	Part No.	Description	Price		
			£	s.	d.
WA2106	122050	Washer, Eccentric			6
WA2107	122083	“O” Ring	11	3	
WA2108	122107	Frame, Cash Door	16	8	
WA2109	122109	Cash Box Door	1	4	9
WA2110	122113	Pilot	2	5	2
WA2111	122114	Spring, Pilot	16	8	
WA2112	122115	Spring Cup			11
WA2113	122131	Socket, Relay	9	0	
WA2114	122132	Retainer	4	6	
WA2115	122133	Relay	4	13	11
WA2116	122161	Decorative Glass Canopies	3	7	8
WA2117	122219	Glass—Front	2	16	5
WA2118	122359	Lamp 303 G.E.	2	11	
WA2119	122366	Relay	5	13	0
WA2120	122369	Cross Rail & Silk Screen Assy.	4	7	0
WA2121	122384	Switch Assy. Control	1	0	3
S141	122411	25 watt. 28 in. Fluorescent Lamp	1	10	4
WA2122	122415	Door Glass—2700	13	10	11
WA2123	122439	Light Ballast 3 Lamp 25 watt. 50 cycles	5	8	4
WA2124	122456	Light Diffuser & Paint Ass.	1	11	6
WA2125	122500	“O” Ring	8	0	
WA2126	122501	“O” Ring	11	3	

SPARES — WURLITZER — EX U.S.A. (Continued)

	Cat. No.	Part No.	Description	Price		
				£	s.	d.
	WA2127	122564	Pick-up Cable & Plug Ass.		10	1
	WA2128	122566	Cable, Tone Arm Brush		4	6
	WA2129	122668	Stylus, .7 Sapphire	1	0	11
	WA2130	122681	Motor & Pinion Ass.	14	7	5
	WA2131	122738	Solenoid	3	8	5
	WA2132	67478	RW90 Keys		3	9

SPARES — WURLITZER — EX EUROPE

Cat. No.	Part No.	Description	Price £ s. d.		
WG1000	00/56	24V. 15 watt. Lamp		6	0
WG1001	01/8	Lock for Front Glass	1	16	9
WG1002	01/8a	WUA1 Key		9	2
WG1003	03/1	Amplifier/Power Supply Unit	44	6	0
WG1004	03/33	Rectifier B250 C 150 M.	2	10	5
WG1005	03/40	3 amp. Fuse		1	4
WG1006	03/41	4 amp. Fuse		1	4
WG1007	03/42	6 amp. Fuse		1	4
WG1008	03/43	0.3 amp. Fuse		1	4
WG1009	03/95	E.C.L. 86 Valve		14	7
WG1010	07/00	Resistor 20 ohm/6W		5	3
WG1011	07/01	Resistor 50 ohm/6W		5	3
WG1012	07/22	Credit Unit	23	12	6
WG1013	07/67	Coil Spring, M 4 Latch Lever			5
WG1014	07/68	Latch Lever M4		5	3
WG1015	07/72	Latch Solenoid M4	1	19	11
WG1016	07/73	Switches M4-1		10	6
WG1017	07/96	Set of Contact Springs. "TK" Switch		3	9
WG1018	07/142	Cone Wheel	1	4	2
WG1019	07/163	Select Solenoid	1	5	4
WG1020	07/196	Bevel Wheel		18	11
WG1021	07/201	Plug. Connecting Strip		8	5

Cat. No.	Part No.	Description	Price £ s. d.		
WG1022	07/335	Cable, Tone Arm Guide		8	5
WG1023	07/340	Drive Belt, Turntable		12	9
WG1024	07/344	Micro Switch (Mute & Play)	1	4	2
WG1025	07/352	Tone Arm Ass. Complete	6	6	0
WG1026	07/370	Stereo Catridge, complete with Sapphire Stylus	2	7	3
WG1027	07/370 S	Type STK 494 Sapphire Needle		4	6
WG1028	07/437	Transparent Record Guide Plate	1	7	2
WG1029	07/503	Needle Brush with Arm	1	5	4
WG1030	07/534	Record Clamp Assembly Complete	7	7	0
WG1031	07/588	Pad—Turntable		5	10
WG1032	07/635	Rubber Mounting—T.T. Motor		9	9
WG1033	07/645	Turntable Motor & Worm Ass., 50 cycles	9	19	6
WG1034	07/670	Gear & Shaft Pulley & Bushing Ass.	3	3	0
WG1035	07/776	Trip Switch "K3"		7	6
WG1036	07/888	Condenser	1	19	0
WG1037	07/1724	Transfer Switch TS.	2	2	0
WG1038	07/1762	Toggle Spring		3	9
WG1039	07/1731	"SR" Relay	4	4	0
WG1040	07/1742	Spring, Switch		5	10
WG1041	07/1864	Motor MM with Pinion & Mount- ing Bracket	17	17	0
WG1042	07/1894	Set of Brass Sheets		3	9
WG1043	07/2000	(Delay Cylinder) Dash Pot	1	0	3

SPARES — WURLITZER — EX EUROPE (Continued)

Cat. No.	Part No.	Description	Price		
			£	s.	d.
WG1044	07/2004	Bracket		1	0
WG1045	08/52	"Lyric" Sign	1	0	1
WG1046	08/54	Frame, Cash Box Door		13	4
WG1047	08/163	Extrusion, Front Glass	7	9	10
UT538	08/222	16W Fluorescent Lamp	1	11	1
WG1048	08/315	Select Button "A"		12	0
WG1049	08/342	Select Button "B"		12	0
WG1050	08/365	Casting, R.H. with Coin Slot	1	14	4
WG1051	08/374	24V Credit Lamp		2	10
WG1052	08/408	Latch Magnet M3	1	16	9
WG1053	08/480	Thermo Switch TH, ETA 65003/A3	1	15	7
WG1054	08/567	Coin Switch Assembly, MK1, MK2, MK3 English Coinage	2	7	3
WG1055	08/568	Coin Paddle, English Coinage		1	8
WG1056	08/577	Coin Switch		7	6
WG1057	08/626	Lock—Cash Box Door	1	17	8
WG1058	100/3-A	Program Holder 1A to 6D. Lyric "E"		14	10
WG1059	100/3-B	Program Holder 3B to OE „ „		14	10
WG1060	100/3-F	Program Holder 1F to 8J „ „		14	10
WG1061	100/3-G	Program Holder 3G to OK „ „		14	10
WG1062	100/20	Program Holder Frame	3	0	11
WG1063	101/2	Front Glasses	10	10	0
WG1064	107/81	Contact Plate	1	0	1

Cat. No.	Part No.	Description	Price		
			£	s.	d.
WG1065	107/95	Selector Solenoid		7	8
WG1066	108/306	Set of Contact Springs (Letter Switch)		4	1
WG1067	108/354	Selector Button Caps		1	0
WG1068	108/471	Extrusion with Spring Wire		9	0
WG1069	108/501	Contact Springs		3	7
WG1070	108/545	Set of Contact Springs		10	6
WG1071	108/615	Spring Contacts—Latch Solenoid, Number Sk3		4	6
WG1072	108/617	Solenoid & Plunger (M1, M2, M3)	1	16	2
WG1073	108/618	Solenoid Stop		6	2
WG1074		Plastic Credit Wheel in Credit Accumulator	1	7	0
WG1075		Plastic Cancel Wheel in Credit Accumulator	1	7	0
WG1076		Plastic Needle Mounting for Stereo Cartridge		1	0